

GENERAL POINTS TO NOTE

1. This dishwasher is a PROFESSIONAL one and it operates differently to domestic machines
2. It takes approximately 5 minutes to wash a load, but
3. You should STARTUP and allow approximately 1 hour for it to fill and heat before you want to wash dishes
4. It is plugged in to a socket on the wall behind the water heater, to the left of the main sink
5. There is a choice of 2 main square baskets but the machine only takes ONE. Depends on the shape of the items you are washing. The cutlery basket can be placed on either of them
6. Wash and rinse liquids are dispensed from large containers in the adjacent cupboard
7. At end of hiring, you **MUST** do a proper pumpdown empty & shutdown - see below

STARTUP / INITIAL FILL & HEATING - allow approx 1 hour before first wash

1. With the dishwasher door closed
2. Switch on the power socket on the wall behind the hot water boiler to the left of the main sink
3. Press and hold the machine's on-off button for 2 or 3 seconds (below **L5** in the picture below)
4. The display will initially display an irrelevant firmware code Fxx/Rxx, followed by **FILL**
5. Wait until the display on the machine flashes alternating between **End** and **P1/P2/P3**

NOW TO WASH SOME DISHES

1. Swap the main basket if needed and add the cutlery basket if needed
2. Rinse off any food deposits from the items to be washed
3. Load the basket with the items and close the door
4. Decide if you want a short, medium or long wash (**P1, P2 or P3**)
5. Press and hold the selected program button (**P1 is below LED L1, P2 is below LED L2, P3 is below LED L3**) for 2 or 3 seconds until the program LED above it flashes
6. The wash will now start, and during its cycle, a series of vertical bars in the display will indicate progress |||||
7. When the program is over, the program LED will stay on, and the display will alternate between **P1/P2/P3** and **End**
8. The machine is immediately ready to do another load if needed. Go back to step 1

AT THE END OF HIRING, PUMP-DOWN EMPTY & SHUTDOWN *** IMPORTANT ***

1. After your final wash has completed (step 7 above) and with the door closed
2. Press and hold the **PUMP-OUT** button (see below, **below LED L4**) for about 5 seconds
3. The **L4 LED** will flash and the display will scroll the word "UnLoad"
4. When the pumpdown has completed, the dishwasher switches itself off and the display will now indicate **OFF**
5. Now you can go to the switch on the wall socket, and switch off the power

Control panel

